


Check-It-Gauge (Adjustable)

Users Guide

Set Up:

- **Change Indicator Tip:** Loosen *Indicator Locking Screw*, remove indicator and change tip. Replace indicator and lock into position.
- **Change Indicator View:** Loosen *Indicator Locking Screw*, rotate indicator in holder so face can easily be viewed. Relock screw.

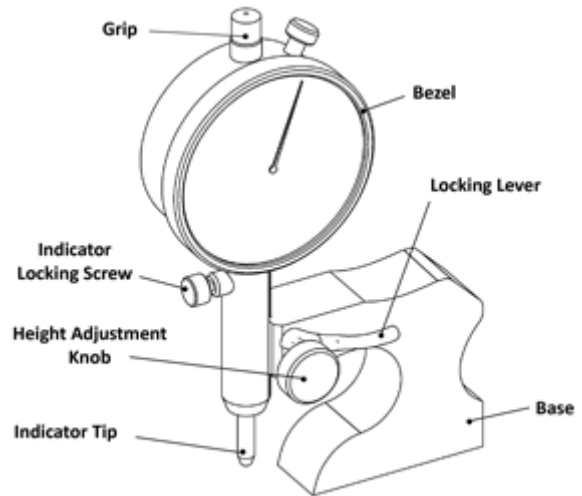

*Reference Plane is the surface on which the Base is placed

Reading Above a Reference Plane:

1. Release *Locking Lever* by pulling up, use *Height Adjustment Knob* to position *Indicator Tip* on the Reference Plane*, then push *Locking Lever* down to relock.
2. Complete fine adjustment by turning indicator *Bezel* to zero.
3. Raise *Indicator Tip* using the *Grip* and position onto the area to be measured.
4. Read indicator for height.

Reading Below a Reference Plane:

1. Release *Locking Lever* by pulling up, use *Height Adjustment Knob* to position *Indicator Tip* onto the surface below the Reference Plane to be measured, push *Locking Lever* down to relock.
2. Complete fine adjustment by turning indicator *Bezel* to zero.
3. Raise *Indicator Tip* using the *Grip* and position it on top of the Reference Plane.
4. Read *Indicator* for depth.

Usage Tips:

- Check-It-Gauge can be zeroed out at any point to make comparative measurements.
- If the indicator needle quivers or readings do not repeat, check for dirt under the base or at the indicator tip.